

USING YOUR REMOTE CONTROL

Find programs with just a few taps of the remote control. Use these quick tips to enjoy full access to your guide.

1 GUIDE

Displays **TV Listings Grid**

2 MENU

Displays **Parental Controls** and **General Setup**

3 NAVIGATION BUTTONS

Navigate or browse 

4 OK/ENTER

In the TV Listings Grid, selecting OK on a program currently airing will tune to that channel for immediate viewing.

5 INFO

- Press 1x to Access the **On Now/On Next Banner**
- Press 2x to Display the **TV Listings Grid**
- Press 3x to Display the **Program Information Screen**



6 EXIT

Exits guide and returns to full screen live TV.

7 PAGE +/-

In the TV Listings Grid, scrolls up and down

8 LAST

Returns you to the last screen or channel.

9 CHANNEL +/-

Changes the channel while displaying the On Now/On Next Banner.

10 SETUP

Displays **Parental Controls** and **General Setup**

11 LANG (LANGUAGE)

Access Audio Language settings.

PARENTAL CONTROLS

Set viewing restrictions by channel and rating. Locked programs cannot be viewed until the assigned PIN is entered.

Setting Up Your PIN

- 1 Press **MENU** on the Remote Control.
- 2 Press **OK/Enter**. A pop-up window appears asking for initial PIN setup.
- 3 Enter a 4 digit PIN of your choice.
- 4 The guide will prompt you to confirm your PIN. Once confirmed, the status column will read **Set**.



Locking By Ratings And Channels

- 1 Press **MENU** on the Remote Control.
- 2 Press **RIGHT** to highlight the second column.
- 4 The user will be prompted to setup or enter their PIN.
- 3 Press **DOWN** to highlight **Channels**, **Movie Ratings** or **TV Ratings**. The third column will populate with a rating or channel list. A lock or unlock icon will appear next to each.
- 4 Press **RIGHT** to access the third column.
- 5 Use the **UP** and **DOWN** buttons to navigate the list.
- 6 Highlight the desired channel or rating and press **OK/Enter** to initiate the lock. The icon will change to locked.
- 7 If the lock is already set, you can press **OK/Enter** to unlock. The icon will change to unlocked.



Rovi DTA Guide

Quick Reference Guide



* Remotes may vary by cable service provider.

WELCOME TO ROVI DTA GUIDE

Find what to watch quickly and explore programming right from your existing remote control! Press **INFO** to get instant information on what you are watching and move onto other screens using the guide's intuitive browsing experience.

ON NOW/ON NEXT BANNER

Get instant information on what's currently playing and what's coming up next.

Accessing What's ON NOW

- Change **CHANNELS +/-** keys while watching TV, or
- Press **INFO** while watching TV



See What's ON NEXT

- Press **RIGHT** to see what's 'On Next'
- **ON NEXT** will become highlighted in Orange
- Press **LEFT** to return to what's 'On Now'

Browsing the Channel Lineup

- 1 To browse programming on other channels, press **UP** and **DOWN**. The **On Now/On Next Banner** will display information for that channel.
- 2 Press **LEFT** and **RIGHT** to toggle between what's 'On Now' and what's 'On Next.'
- 3 To tune to a program airing now, press **OK/Enter**.

THE TV LISTINGS GRID

Access seven channels of TV listings at a time, with a 90 minute view of each. Browse up to 24 hours of continuous program information.

Accessing the TV Listings Grid

- Press **GUIDE**
- Press **INFO** from the On Now/On Next Banner



Program Types and Colors

- **Orange** - Active Selection
- **Magenta** - Kids*
- **Blue** - General Programs
- **Purple** - Movies
- **Green** - Sports

Browsing the Channel Lineup

- 1 Access the TV Listings Grid.
- 2 Use the **UP**, **DOWN**, **LEFT** and **RIGHT** through the grid one program or channel at a time.
- 3 Use the **PAGE +/-** keys to page up and down through the guide (seven channels at a time).
- 4 Highlight a program and quick info will display in the upper left hand corner of the screen.

Tuning from the TV Listings Grid

Highlight a program airing now and simply press **OK/Enter** on the remote control to tune to that channel.


*Kids program type and color (magenta) may not be supported by all guides.

PROGRAM INFORMATION SCREEN

Get in-depth information on TV shows, movies, sports events and more.

Accessing the Program Information Screen

- Press **INFO** from the TV Listings Grid

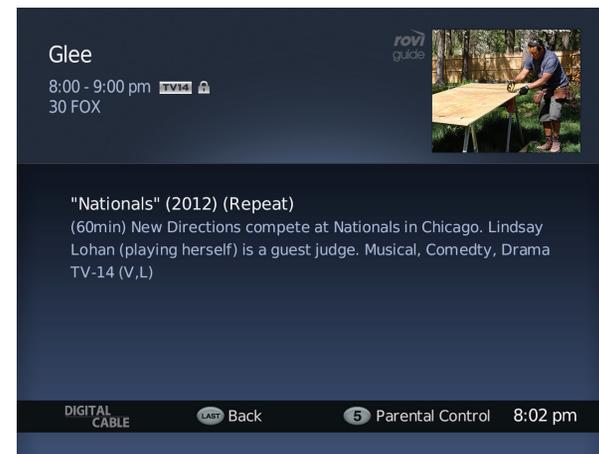

Options

- Press **LAST** to return to the TV Listings Grid
- Press **5** to access Parental Control

GENERAL SETUP

Use General Setup to personalize language options for menus, subtitles and audio language.

- 1 Press **MENU** on the Remote Control.
- 2 Press **DOWN** to highlight **General Setup**.
- 3 Press **RIGHT** for options.

AUDIO LANGUAGE SETTINGS

Use the audio language options to personalize alternate language soundtracks.

- 1 Press **LANG** on the Remote Control.
- 2 The currently selected language is shown with a check mark in the third column.
- 3 Press **UP** and **DOWN** to navigate the list.
- 4 To change the language, select an option and press **OK/Enter**. A check mark will appear next to that option.